


GB AWT 5098

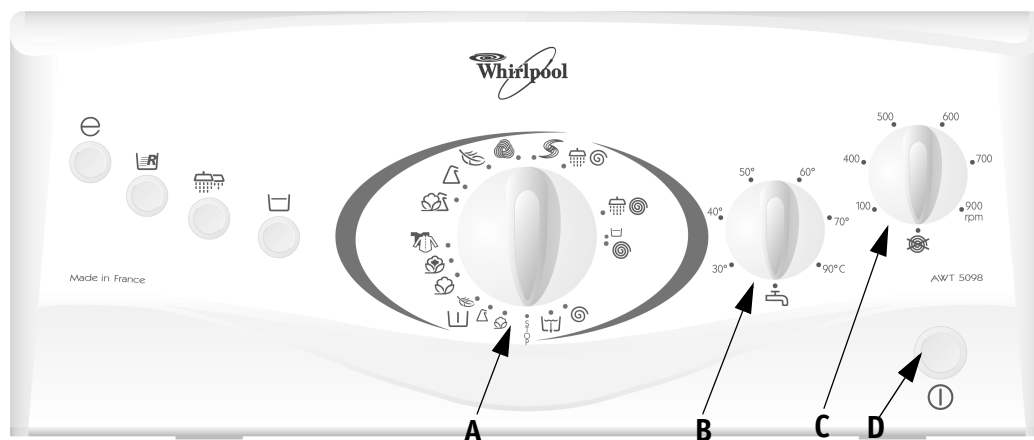

- A. Programme Selection Knob**
B. Temperature Selection Knob
C. "Spin Speed Selection" Knob
D. "On/Off" Button ①

- "Cold"
 "No spin"










* : option / Yes: dosing required

- 1) Do not use liquid detergents.
 2) For improved garment care, spin speed is restricted to 700 rpm in this programme.
 3) For improved garment care, spin speed is zero in this programme.

Programme	Care Labels	Type of wash / Notes	Max. load kg	Detergents and additives				Special Options				Temperature °C	Max. Spin Speed rpm
				Prewash	Main Wash	Softener	Bleach	Eco	Rapid	Intensive Rinse	Rinse Hold		
Cotton with prewash		Heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.	5.0	Yes ¹⁾	Yes	*	*	*	*	*	*	Max. 90	900
Synthetic with prewash		Heavily soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	2.0	Yes ¹⁾	Yes	*	—	*	*	*	*	Max. 60	700 ²⁾
Delicate with prewash		Heavily soiled curtains and delicate clothing, dresses, skirts, shirts and blouses.	1.5	Yes ¹⁾	Yes	*	—	—	—	—	*	Max. 40	700 ²⁾
Cotton		Normally to heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.	5.0	—	Yes	*	*	*	*	*	*	Max. 90	900
Coloured Cotton		Normally soiled bed linen, table linen and underwear, towels, shirts etc., made of cotton and linen.	3.0	—	Yes	*	—	—	—	*	*	Max. 60	900
Daily Mixed		Slightly to normally soiled textiles made of cotton and/or synthetics.	3.0	—	Yes	*	—	—	—	*	*	Max. 60	900
Mixed cotton/Synthetic		Normally to heavily soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	2.0	—	Yes	*	—	*	*	*	*	Max. 60	700 ²⁾
Synthetic		Normally soiled overalls and sportswear made of cotton, polyester, polyamide and blends with cotton.	1.5	—	Yes	*	—	—	—	*	*	Max. 60	700 ²⁾
Delicate		Curtains and delicate clothing, dresses, skirts, shirts and blouses.	1.5	—	Yes	*	—	—	—	—	*	Max. 40	700 ²⁾
Wool		Only woollens with a felt-free finish, labelled with the woolmark and identified as machine washable. <i>If you select "Rinse Hold" do not leave items to soak for too long.</i>	1.0	—	Yes	*	—	—	—	—	*	Max. 40	700 ²⁾
Silk		Textiles made of silk, linen, wool and viscose marked as "handwashable". <i>If you select "Rinse Hold" do not leave items to soak for too long. No spinning.</i>	1.0	—	Yes	*	—	—	—	—	*	Max. 30	— ³⁾
Rinse + Gentle Spin		<i>Programme for treating delicate laundry with starch or softener.</i>	2.0	—	—	*	—	—	—	—	*	—	700 ²⁾
Rinse + Spin		<i>Programme for treating cotton or linen laundry with starch or softener.</i>	5.0	—	—	*	—	—	—	—	*	—	900
Spin		<i>Programme to spin cotton or linen laundry intensively with maximum spin speed.</i>	5.0	—	—	—	—	—	—	—	—	—	900
Gentle spin		<i>Programme to spin delicate laundry gently with a restricted spin speed.</i>	2.0	—	—	—	—	—	—	—	—	—	700 ²⁾
Drain		<i>Drain only - no spinning. Alternative method of terminating programme after "Rinse Hold".</i>	—	—	—	—	—	—	—	—	—	—	—

N.B. This machine is controlled by sensors. Please avoid excessive detergent dosing.

CONSUMPTION DATA



 




Programme	Temperature Selector (°C)	Load (kg)	Water (l)	Energy (kWh)	Approx. Programme Duration (hours : minutes)
 Cotton	90	5.0	63*	1.80	2:05
 Cotton	60	5.0	55	0.95	2:05
 Cotton	40	5.0	55	0.55	2:05
 Daily Mixed	40	3.0	49	0.48	1:00
 Synthetic	60	2.0	56	0.80	1:35
 Synthetic	40	2.0	50	0.40	1:30
 Delicate	40	1.5	60	0.55	0:50
 Wool	40	1.0	60	0.50	0:40
 Silk	30	1.0	60	0.30	0:50

Prewash cycle increases programme duration approximately 15 min. Consumption values were measured in normalized conditions in compliance with standard IEC 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash.

The data on the "Energy Label" refer to the programme "Cotton 60°C".

* To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

PREPARATION OF WASH CYCLE


- Load the machine, close the drum doors and check that they are properly locked.
- Add detergents and additives into the dispenser to no more than the **"MAX"** level mark, as follows:
 - Programme with pre and main wash 
 - Main wash programme without prewash 
 - Fabric softeners and conditioners 
 - Chlorine bleach 
 - Stain remover agents 
 - Anti-scale agents (if necessary) 
- Turn the **programme selector knob** to the desired programme.
- Turn the **temperature selector knob** to the desired temperature.
- Turn the **spin speed selector knob** to the desired spin speed. If the spin speed  "0" is selected, the final spin is cancelled, but not the intermediate spins. The programme ends with a drain cycle.

SELECT THE DESIRED OPTION

Selecting or deselecting an option can be done at any time during the programme. The option will be applied as long as the corresponding programme phase has not been executed yet.

"Eco" button 

- The duration of the wash is extended and the max temperature reduced to save up to 40% of energy compared to a normal wash but maintaining good washing results.

 
 
 
"Rapid" button 

- For fast, energy saving wash cycles.
- Ideally suited for small loads consisting of lightly soiled laundry.

"Intensive Rinse" button 

 
 

 
- One rinse cycle is added to ensure a more intensive rinse.
- This option is particularly suitable for areas with very soft water, washing baby linen and people with detergents allergies.

"Rinse Hold" button 



- The laundry remains in the last rinse water without progressing to the final spin cycle to avoid creasing and prevent colours from fading.
- This option is particularly recommended for the "Synthetic" , "Delicate"  and "Daily"  Mixed" programmes.
- This function is particularly useful if you want to postpone spinning to a later time, or if you want to drain only.

Note: the programme selector knob stops on .

Appliance in "Rinse Hold":


- Press the "Rinse Hold"  button again: the programme will terminate automatically with the selected spin cycle.
- If you do not wish to spin the clothes, press the "On/Off"  button, turn the programme selector knob to the "Drain"  programme and press the "On/Off"  button again.

PROGRAMME START



Turn on the tap and press the "On/Off"  button. The indicator light of the "On/Off"  button lights up.

Note: If there is a power interruption or if the appliance is disconnected during the cycle, the programme will run again from the point where it was interrupted.

END OF WASH CYCLE



- The programme selector knob is in the "Stop" position.
- Press the "On/Off"  button to switch off the machine.
 - Cancel the options.
 - Turn the tap off.
 - Wait for the lid to unlock (about 1 minute).
 - Open the lid and the drum doors and unload the machine.

CHANGE THE PROGRAMME DURING THE WASH CYCLE




- Switch off the machine by pressing the "On/Off"  button.
- Select the new programme.
- Start programme by pressing the "On/Off"  button again.

PAUSE/INTERRUPT A PROGRAMME

If, for any reason, you wish to interrupt the programme for a certain time and continue it later:

- Press the "On/Off"  button.
- After the desired pause, press again the "On/Off"  button.

CANCEL PROGRAMME

- Switch off the machine by pressing the "On/Off"  button.
- Set the programme selector to "Drain" .
- Press the "On/Off"  button again to start the "Drain" programme.